



Horizontal Units

HP012H
 & UP TO
 HP018H

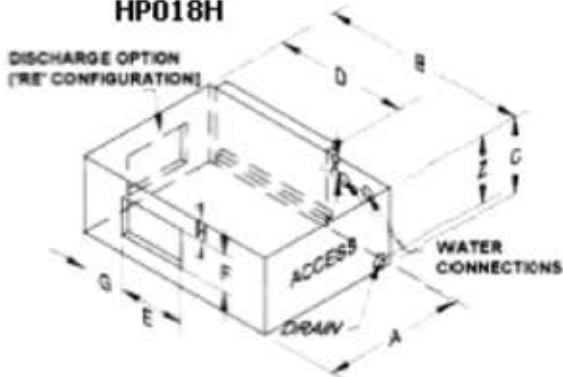


'R' CONFIGURATION

HP024H
 & UP TO
 HPX060H

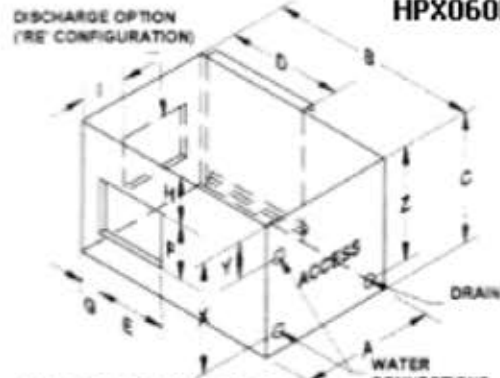


'R' CONFIGURATION

HPX072H
 & HPX144H

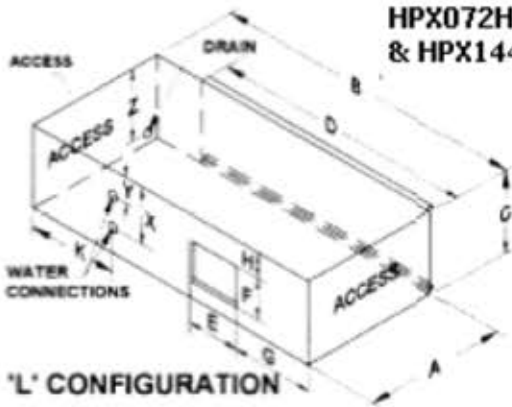

'L' CONFIGURATION


HPX090H
 AND UP TO
 HPX120H

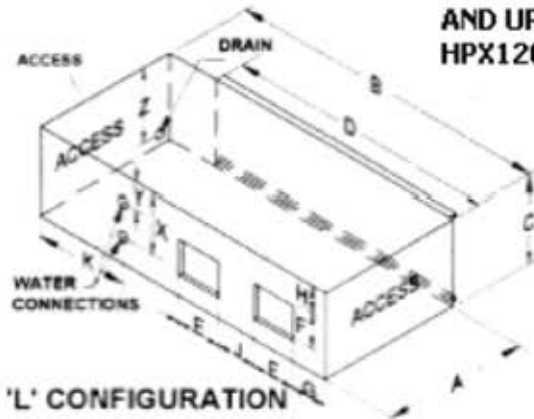


'L' CONFIGURATION

Vertical Units

HPX024V -
 HPX072V

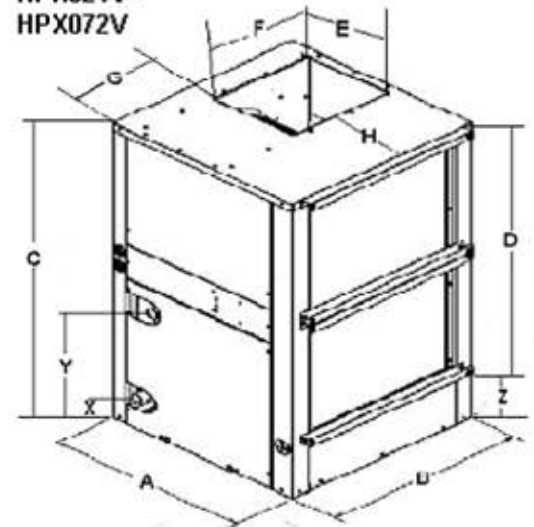

'LF' CONFIGURATION
 HPX090V - HPX120V

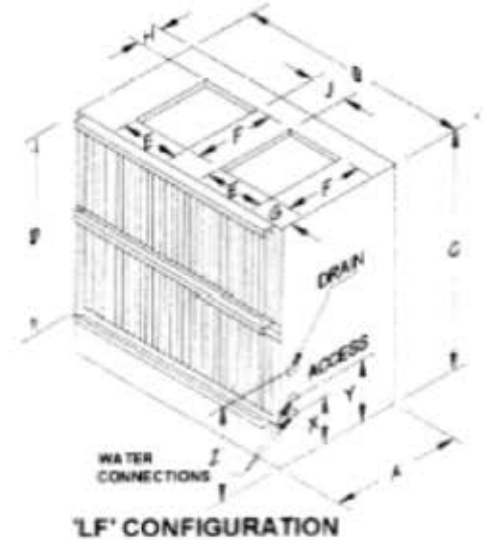

'LF' CONFIGURATION